naNo KITTY™

INSTRUCTIONS

www. playmatestoys. com

The object of the game is to take care of your Nano Kitty just like you would a real kitty.
If you take good care of your Nano Kitty, it will grow up happy. If you neglect your Nano Kitty, it will run away from home.
The game takes approximately one month to play successfully.

CONTROLS

Cancel/Mode ○
Left Cursor ◁
Right Cursor ▷
Confirm □

There are two different modes for your Nano Kitty:
Timer Mode & Game Mode

Remove the Activation Tab by pulling it straight out.
Your Nano Kitty should now be activated.

SET THE TIMER

Press button ○ to enter Timer Mode.
Press button □ and hold until the numbers begin to blink.
Press button ◁ to advance the hour.
Press button ▷ to advance the minutes.
Press button □ to enter the time and start the Timer.
Press button ○ to go back to Game Mode.

AGES 8 AND UP

Playmates®

ASST. NO. 40080
STOCK NO. 40070

After you set the current time on your Nano Kitty, sit back and watch the wonders of binary birth, (be patient, this takes a few minutes.)

SOUND ON/OFF

Press button ○ to enter Timer Mode.
Press button ◁ to turn sound off (bell on display disappears)
Press button ▷ to turn sound on (bell on display appears)
Press button ○ to go back to Game Mode.

KITTY'S HEALTH

In order to take good care of your Nano Kitty, you must know what it needs.
To check the Kitty's Health:
Press button ◁ or ▷ to select the Health Icon on the screen.
Press button □ to confirm your selection.
Scroll through the Health section using buttons ◁ or ▷
You can check the following:
- Age and Weight
- Discipline
- Happiness
- Hunger

Empty hearts indicate a low score and full hearts indicate a high score.
NOTE: Always check the Health Icon when your Nano Kitty cries.)

FEEDING TIME

All kitties work up an appetite so you'll want to feed you newborn Nano Kitty right away. To feed your kitty:
Press button ◁ or ▷ to select the feeding icon on the screen.
Press button □ to confirm your selection.
Press button ◁ or ▷ to select the proper food.
(NOTE: Too many snacks are not good for your Nano Kitty.)
Press button □ again to feed your Nano Kitty.

CLEANING TIME

When your Nano Kitty makes a mess, you have to clean it up -- yuka-puk! If you see some stinky digital droppings on your screen or tiny little paw prints, then it's time to clean your Nano Kitty.
Press button ◁ or ▷ to select the cleaning icon on the screen.
Press button □ again to clean your Nano Kitty.
Repeat as necessary.

PLAY TIME

Playing with your Nano Kitty is very important. There are two games you can play with your Nano Kitty.

Game 1 is peek-a-boo.
Game 2 is chasing the mouse.

Press button ◁ or ▷ to select the game icon on the screen.
Press button □ to confirm your selection.
Press button ◁ or ▷ to select Game 1 or Game 2.
Press button □ again to start the game.

(GAME 1)
You must guess which way your kitty will look. If you think your kitty will look to the left then press button ◁. If you think your kitty will look to the right then press button ▷. Every time you guess correctly you make your kitty happy, guess wrong though, and your kitty becomes sad.

(GAME 2)
You must help your kitty catch the running mouse. At the start of the game a mouse runs across the screen. You have to help your kitty catch the mouse by pressing button ◁ to make your kitty run to the left or button ▷ to make your kitty run to the right. Hurry! You only have a few seconds to help your kitty catch the slippery mouse. If your kitty gets the mouse in time it will be happy, if not it will be sad.

Distributed by: Playmates Toys (UK) Limited, Units 24/25, Fareham Industrial Park, Fareham, Hants, P016 8XB, UK.
Printed in China.

SLEEP TIME
Your Nano Kitty must get plenty of rest; so when you see that your Nano Kitty is snoring, turn out the lights. To turn out the lights:
Press button ◁ or ▷ to select the light icon on the screen.
Press button □ to confirm your selection.
Press button ◁ or ▷ to select either off or on.
Press button □ again.
When your kitty wakes up, don't forget to turn the lights back on.

DISCIPLINE
If your Nano Kitty begins to misbehave then you must discipline your Nano Kitty.
(NOTE: Be sure to check the Health Icon first!) To teach your Nano Kitty to behave, you must:
Press button ◁ or ▷ to select the discipline icon on the screen.
Press button □ to confirm your selection.

MEDICINE
If your Nano Kitty gets sick , you must administer special medicine right away!
(NOTE: If your Nano Kitty will not play with you or will not eat even though it is hungry, then your Nano Kitty is, indeed, sick.)
Press button ◁ or ▷ to select the Medicine icon on the screen.
Press button □ to confirm your selection.
Your Nano Kitty's health will improve after the first dose of medicine and the icon will change appearance . You will need to administer a second treatment 2 hours after the first in order to insure good health. If you attempt to give a second treatment in less than 2 hours from the first, it will take longer to make your Kitty healthy again.

ATTENTION ICON ?!
If the attention icon appears along with a beep, you need to check on your Nano Kitty.

SUCCESS
Be a good pet owner and take very good care of your Nano Kitty and it will grow big and strong and live a long life! If you neglect your Nano Kitty, it will run away from home.

To start a new Nano Kitty, simply:
Press buttons ○ and □ at the same time.
NOTE: Pressing these two buttons will cause the game to reset.

WARNING:
- Do not use rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited
- Caution: battery chargers used with the toy are to be regularly examined for damages to the cord, plug, enclosure and other parts, and that, in the event of such damage, the toy must not to be used with this battery charger until the damage has been repaired.

To replace the batteries, remove the screws and battery cover as shown.

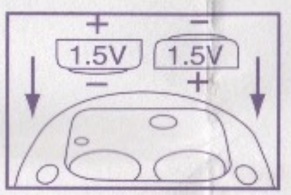

Insert 2x1.5V button cell batteries as shown, and put battery cover back in place and secure with screws.

Includes 2 replaceable button cell batteries. Batteries are included for demonstration purposes only and may need to be replaced by the consumer.

VISIT Playmates WORLD WIDE WEB www.playmates toys.com

AGES 8 AND UP

Playmates®

ASST. NO. 40080
STOCK NO. 40070